

24 Fuse Engine Bay Fuse box: -Spi '95-'96

CABLE COLOUR			FUSE	CIRCUIT
W	G	1	15a	Rear screen heater
W	G	2	15a	Reversing lamps,stop lamps,headlamp dim-dip,indicator relay
N	P	3	15a	Auxiliary cooling fan
N	NO	4	15a	Headlamp dim-dip
LGW	LGO	5	15a	Heater blower,sunroof where fitted
LGW	LGO	6	15a	Wash / wipe
N	P	7	20a	Headlamp flasher,horn,alarm
W	W	8	10a	Tacho,ECU,fuel pump relay,alarm
LGW	LGO	9	10a	Stereo,cooling fan relay,auto gear selector lamp
N	PO	10	10a	Stereo memory, interior lamp,indicators,hazards, alarm, brake fluid warning
NS	NS	11	10a	Fuel pump
WR	WR	12	10a	Starter relay
R	RB	13	10a	Side and tail lamps left hand, number plate lamp
R	RW	14	10a	Side and tail lamps right hand,instrument lamps
UW	UW	15	10a	Main beam headlamp left hand
UW	UW	16	10a	Main beam headlamp right hand & warning lamp
UR	UR	17	10a	Dip beam headlamp left hand
UR	UR	18	10a	Dip beam headlamp right hand
		19	20a	
		20	15a	These fuses reserved for overseas spec systems
		21	10a	}and accessories (A/C system, front fog lamps etc.)
		22	20a	
		23		N/C
U	UO	24	10a	Rear fog lamp

W White
 N Brown
 G Green
 LG Light Green
 S Slate
 R Red
 U Blue
 O Orange
 B Black
 P Purple